


SKYPAD ALPHA²

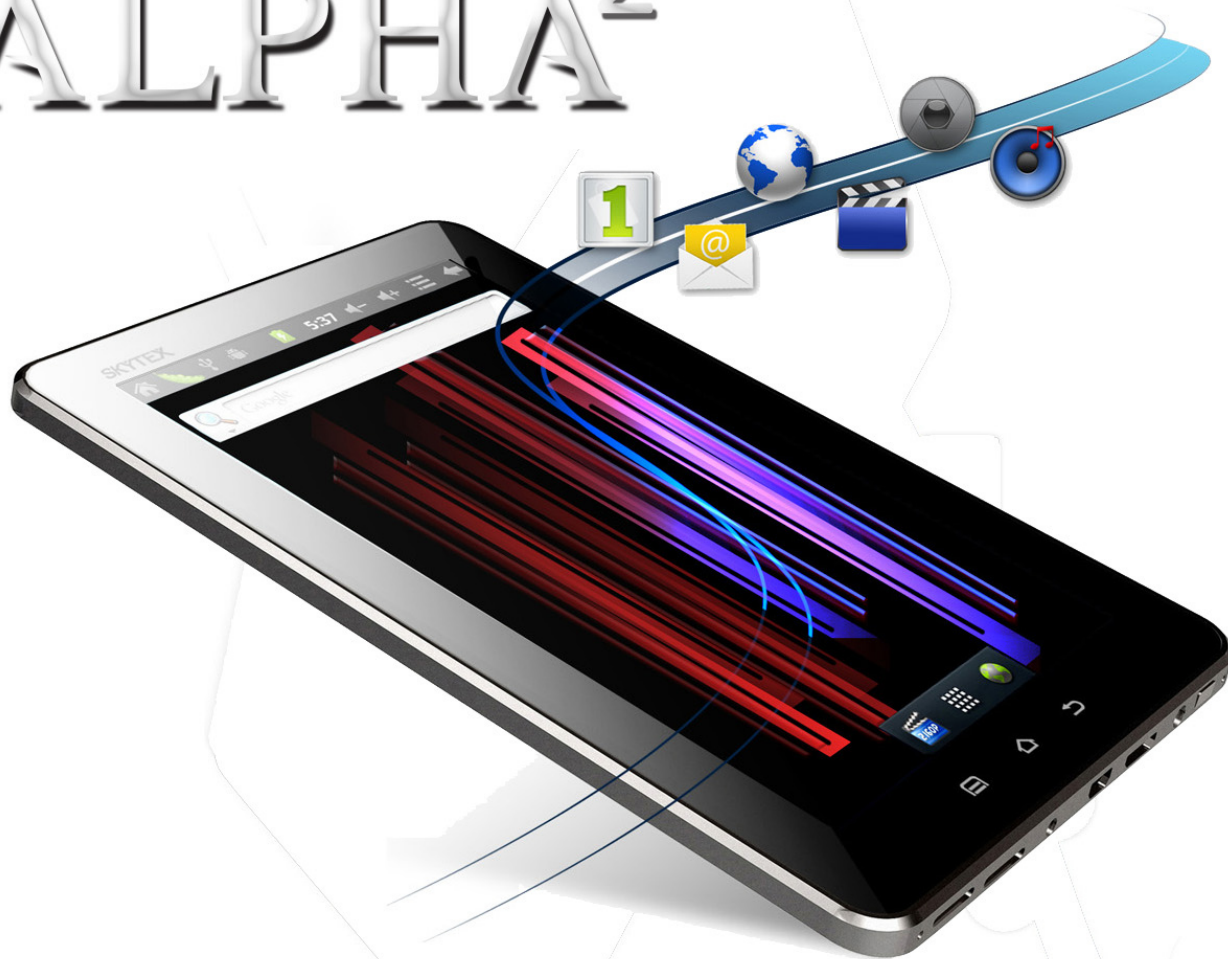

Quick Start Guide


1-Introduction

Thank you for purchasing your new 7" Skypad Alpha2 Android 2.3 tablet with capacitive multi-touch display. The Alpha2 was designed to keep you entertained and engaged anywhere you go with its intuitive controls and sleek profile that fits perfectly in the palm of your hand. Stay connected with friends and family wherever a wireless connection is available.

Use finger gestures to navigate as you surf the web, listen to music, watch HD videos through your HD television, view photos, play games, browse recipes, video chat, review and edit documents, spreadsheets, power points and more. Stay in touch with the latest news, weather and sports, or read an e-book. Download apps from the hundreds of thousands available in the 1Mobile Market that provide limitless productivity and entertainment possibilities.

This QSG will get you started right away, however, we recommend that you review the user manual for a more complete understanding of your Tablet. Visit us at www.skytex.com for additional information and updated FAQ's.

2-Device Controls and Ports

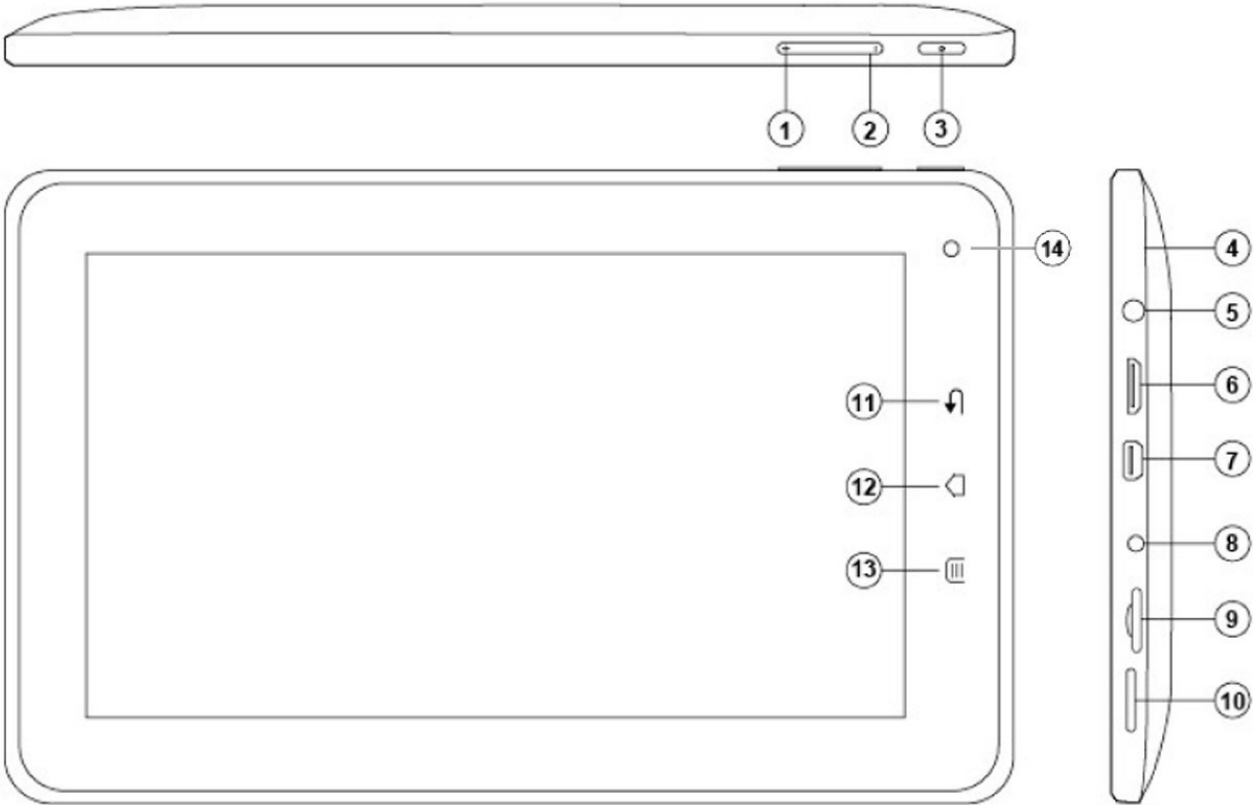


- | | | | | |
|-------------|-----------------------|-------------------------|-------------|------------|
| 1. Volume + | 4. Microphone | 7. mini-USB OTG port | 10. Speaker | 13. Menu |
| 2. Volume - | 5. 3.5mm Audio Jack | 8. DC IN | 11. Back | 14. Webcam |
| 3. Power | 6. mini-HDMI 1.4 port | 9. Micro SD card reader | 12. Home | |

3-Charging Your Device

Connect your AC adapter to your tablet via the DC input on the bottom of the device (illustrated below). The Alpha2 can also be charged via USB by connecting your tablet to a PC with the included USB cable.

It is recommended that the tablet is fully charged before the first use. A full charge and discharge (15% or below) cycle is recommended to maximize the battery's life and capacity.

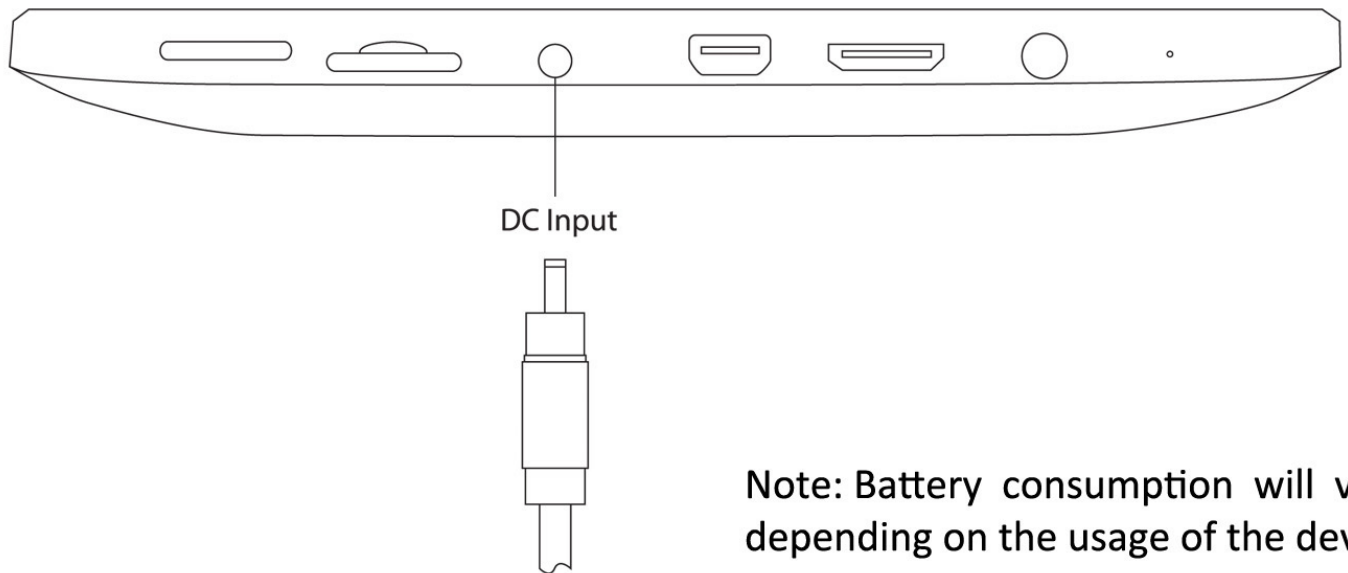

Note: Battery consumption will vary depending on the usage of the device.

4-Turn Device ON/OFF/STANDBY Mode




ON: Press and hold the Power button until the Alpha2 loading screen appears. Once the lock screen appears, unlock the tablet by swiping your finger from the lower “unlock” icon up to the top of the screen (illustrated below). Should the display “timeout” (or go black) before you are able to unlock the device, press the Power button for one second to bring up the display again.

OFF: Press and hold the power button until the device options appear and tap “power off” to shut down the device


STANDBY: To enter standby mode, simply tap and release the power button OR press and hold the power button , then choose the “standby” option.

To wake up from standby, tap and release the power button.

NOTE: Leaving the device in standby mode when not in use will result in minimal battery drain. Switch the tablet completely off to conserve power between charges.

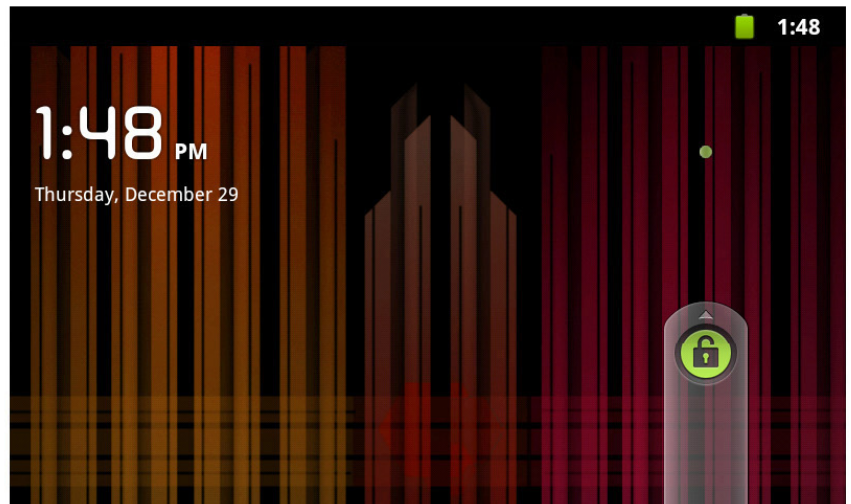

5-Settings - Date, Time & Screen Timeout

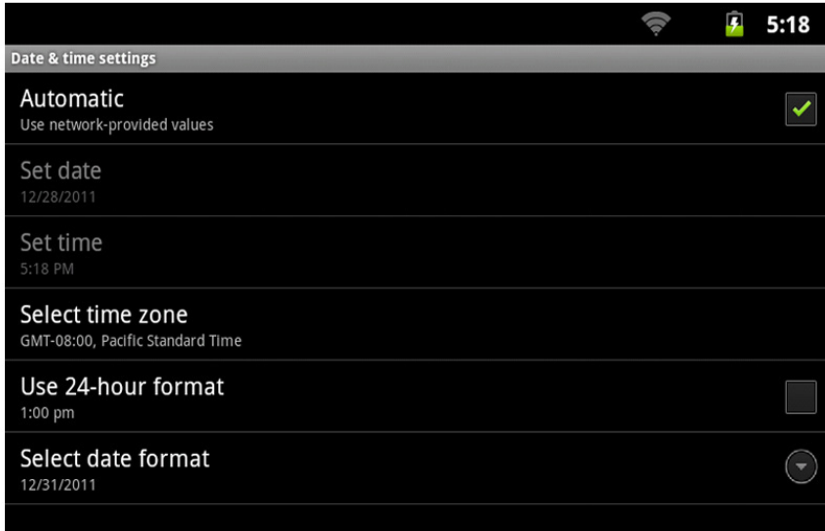

Auto Date & Time

- A. Tap Menu  > Settings  > scroll down to, and tap “Date & time” > Tap “Select time zone” then tap the desired location.
- B. By default your Tablet is set to “Automatic” for the current date & time.

Manual Date Setting


- A. Tap “Automatic” to uncheck>Tap “Set Date”
- B. To set the month, date, and year tap “+” or “-” to adjust then tap “Set”.

Manual Time Setting

- A. Tap “Set Time” > Set the hour and minute by tapping “+” or “-” to adjust then tap “Set.”

Screen Timeout


- A. Tap Menu  > Settings  > Display > Screen Timeout.
- B. A dialogue box will pop-up with several options to choose from. Tap the length of time (in seconds or minutes) the tablet idles before the screen times out.

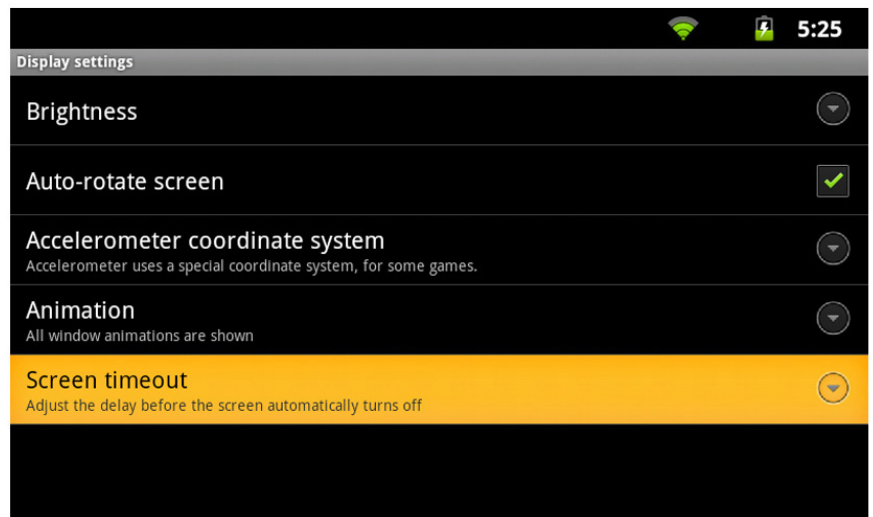


6-Connecting to a Wireless Network

Note: To connect your Alpha2 to the Internet, you must have an Internet connection and a wireless network

- A. Tap Menu  > Settings  > Wireless & Networks > Tap to check the Wi-Fi box. Doing so will turn on Wi-Fi capabilities.
 - B. Tap “Wi-Fi settings” to display a list of available Wi-Fi networks.
 - C. Select your network and enter your password/network key.
- TIP: Check the box “Show Password” to verify password was entered correctly
- D. Tap “Done” then “Connect” to complete the connection.

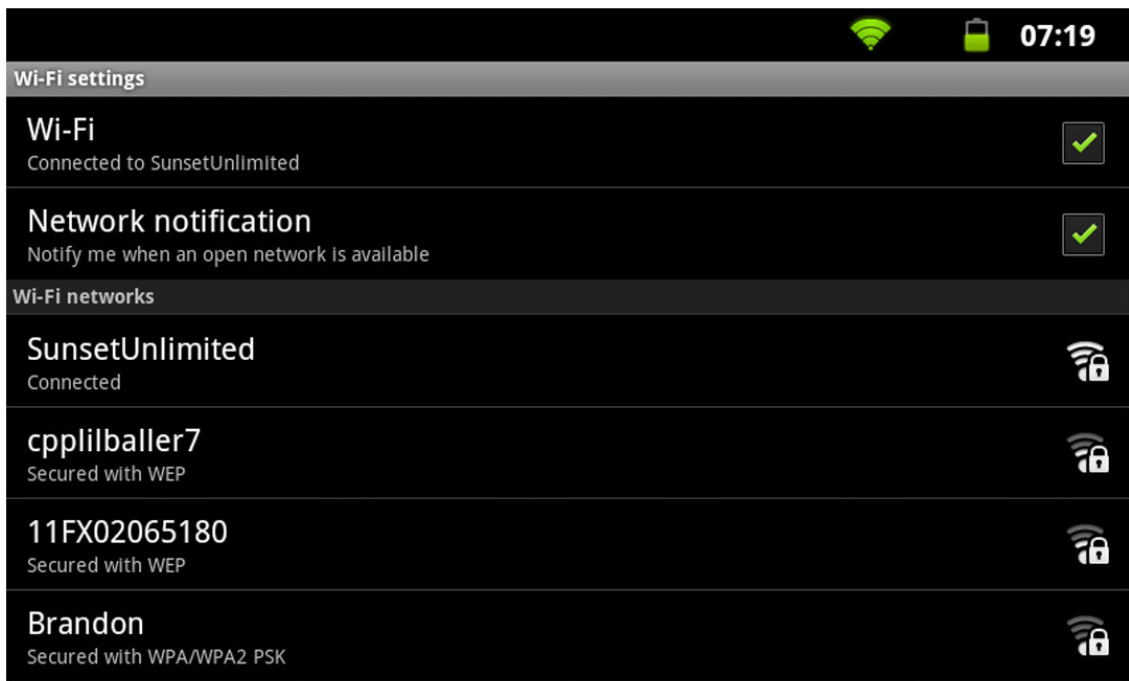

7-Home Screen, Application Shortcuts

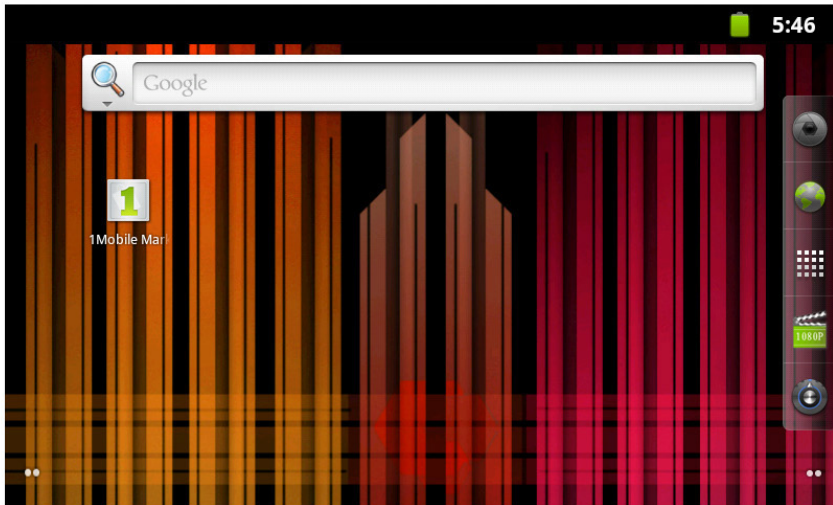

Home Screen

This is your starting point. The home screen features a Status / Notifications Bar, Quick Search Bar and Shortcut Icons:




Add Favorite Apps from App Tray

A. To open your App Tray, tap the  icon to display all of the applications that have been pre-installed or downloaded onto your device.

B. Tap and hold your Favorite app. Release the icon onto your home screen in the desired location.

C. To remove, tap and hold the icon until it enlarges, then drag to the Trash Can and release.

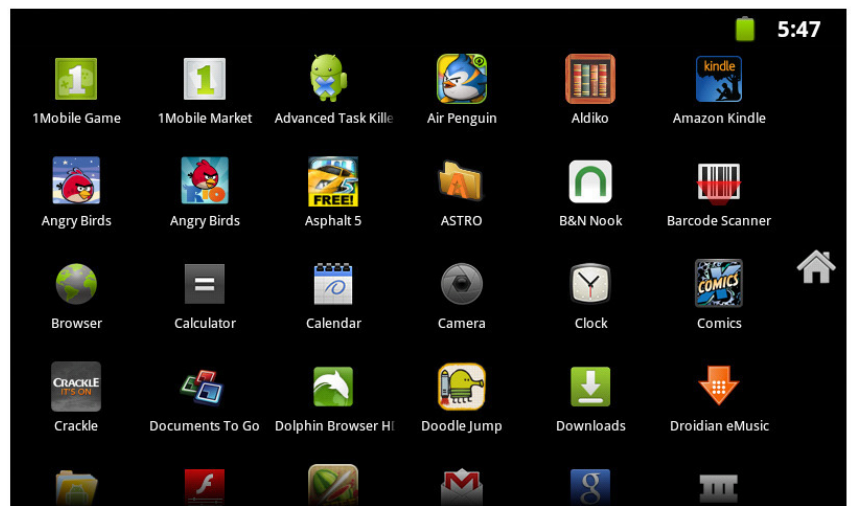

8-Install Popular Applications from 1Mobile Market




Find over 200,000 apps at 1 Mobile; Adobe Flash, Netflix and other streaming video apps, games, social media, Internet radio, news/sports/weather, recipes, maps, software suites to view and edit Microsoft apps, TV guides, telephone directories and more! Visit us at www.skytex.com for recommended apps.

NOTE: The official Android market is not supported at this time.

To download apps

- Tap App Tray  > 1Mobile Market > Search or browse for apps > Tap the desired app > Tap Download.
- When the download is complete, tap "Install".
- To monitor the progress of your download, scroll to the top of the app page in the 1 Mobile Market, OR you can pull down the notification bar to view the download.
- Once your download has completed, you will be prompted to install the app. Tap install and once completed your app will appear in your app tray.

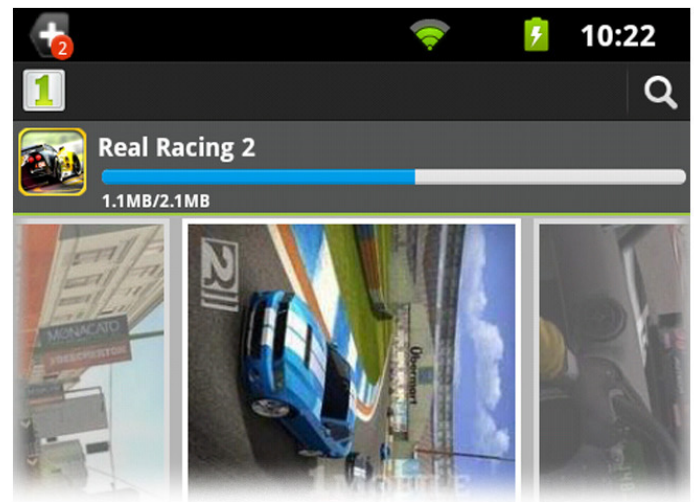

9-Browse the Web




The SKYPAD Alpha 2 is equipped with a full HTML Web Browser, that enables you to view webpages.


- To access the Web browser, select the  icon from the Desktop.
- To enter a URL, tap the URL field at the top of the browser and enter the desired link using the QWERTY keyboard.
- Tap “Go” to load your desired page.

Bookmark a Favorite Page

- While at desired page, tap the menu key
- Tap “more” > Tap “Add Bookmark” > Tap OK

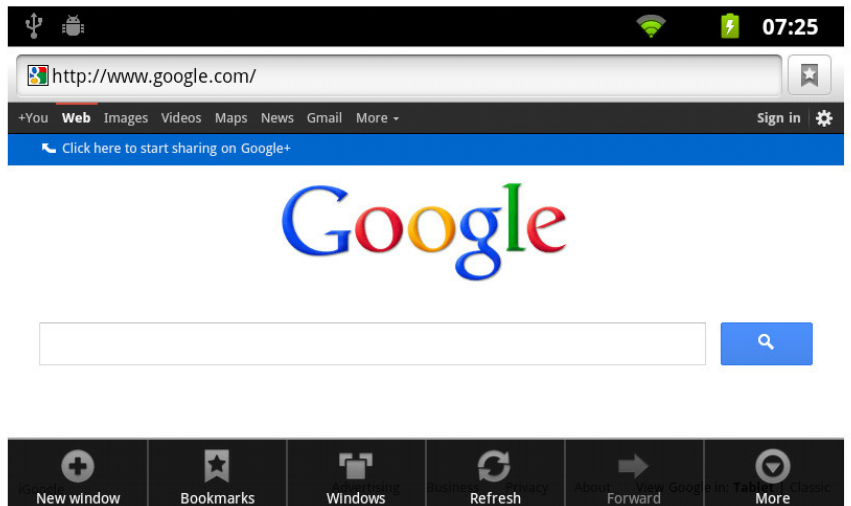


10-Transfer Your Music/Photos/Videos

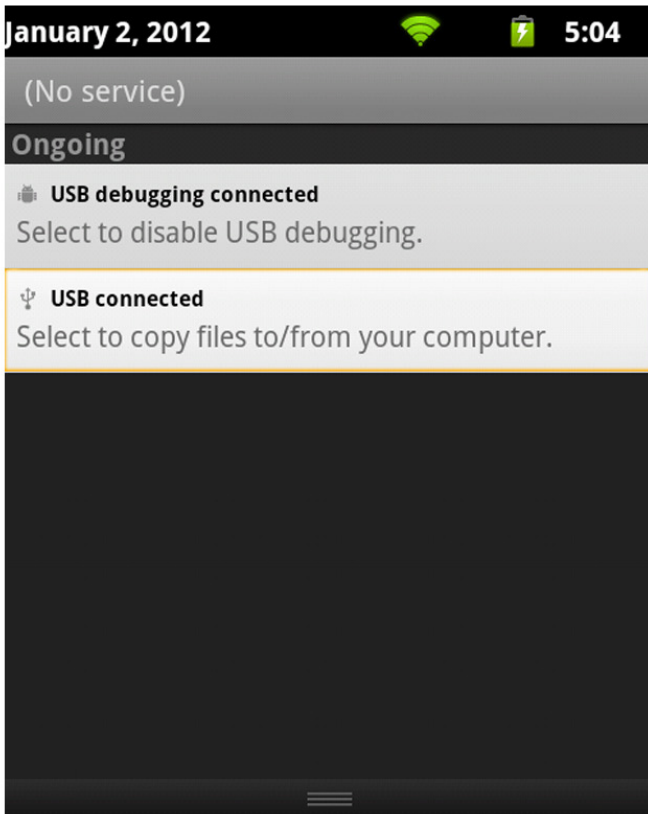


- Connect your tablet to your PC via the USB cable.
- A USB symbol will appear in the notification bar.
- Drag the symbol downward to open your notifications
- Tap “USB connected” > “Turn on USB storage”

You will now be able to drag-and-drop your music, video and photo files between your tablet and PC.

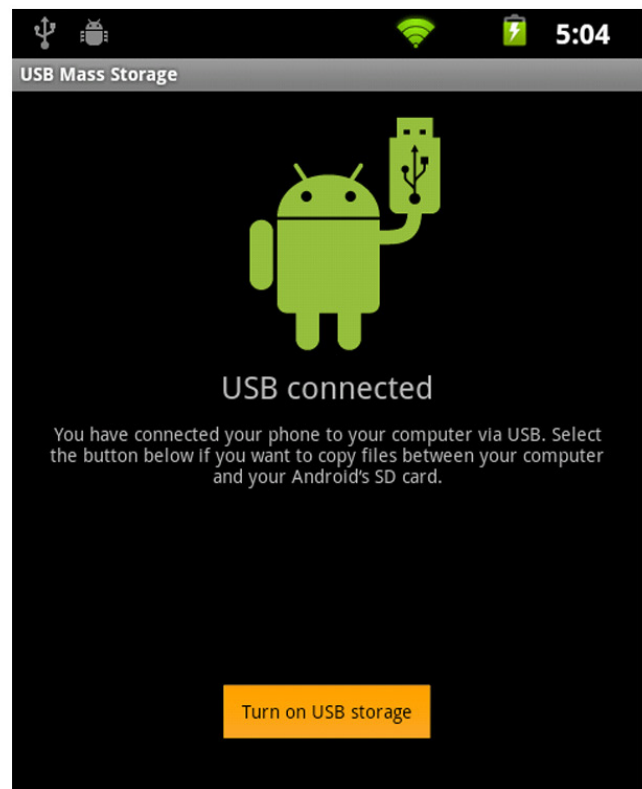

NOTE: Your Tablet will be recognized as an external drive. Once completed, tap “Turn off USB storage” and remove Tablet from your PC.

11-Playing Your Music/Photos/Videos

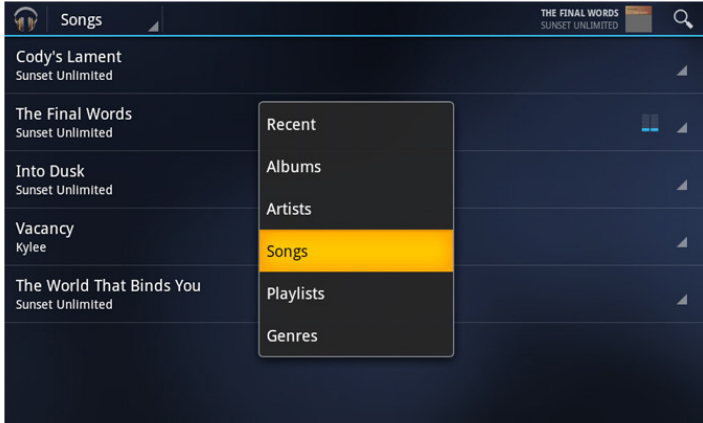

Play Music

- Go to the App Tray  then tap the “Music”  app.
- Select the desired song and adjust volume settings to your liking.
- To exit out of the app, tap the “Home” or “Back” buttons.
- To stop music playback, go back to the Music app and tap Pause (II)

Watch Video

- Go to the App Tray  on the Desktop then tap the “Super-HD Player”  app.
- Select the movie folder/file to view.
- Once the video begins, you may select playback controls that appear on the display.


View Photos

- Go to the App Tray  on the Desktop then tap the “Super-HD Player”  app.
- Tap “Camera”
- Tap on a photo to view it.



Note: Music files transferred to or downloaded on to your Tablet or micro SD card will sync up.

11-Playing Your Music/Photos/Videos

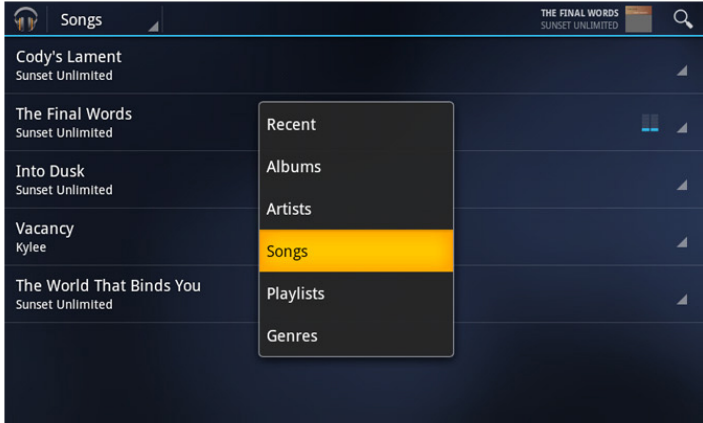

Play Music

- Go to the App Tray  then tap the “Music”  app.
- Select the desired song and adjust volume settings to your liking.
- To exit out of the app, tap the “Home” or “Back” buttons.
- To stop music playback, go back to the Music app and tap Pause (II)

Watch Video

- Go to the App Tray  on the Desktop then tap the “Super-HD Player”  app.
- Select the movie folder/file to view.
- Once the video begins, you may select playback controls that appear on the display.

View Photos


- Go to the App Tray  on the Desktop then tap the “Super-HD Player”  app.
- Tap “Camera”
- Tap on a photo to view it.



Note: Music files transferred to or downloaded on to your Tablet or micro SD card will sync up.

12-Online Video Streaming and HDMI

The Skypad Alpha 2 is capable of streaming videos directly off the Internet or via 3rd party streaming applications. To properly run many of these applications Adobe® Flash® Player may be required. Many popular streaming video applications are available through the 1Mobile market. Prior to streaming films, download the application of your choice.

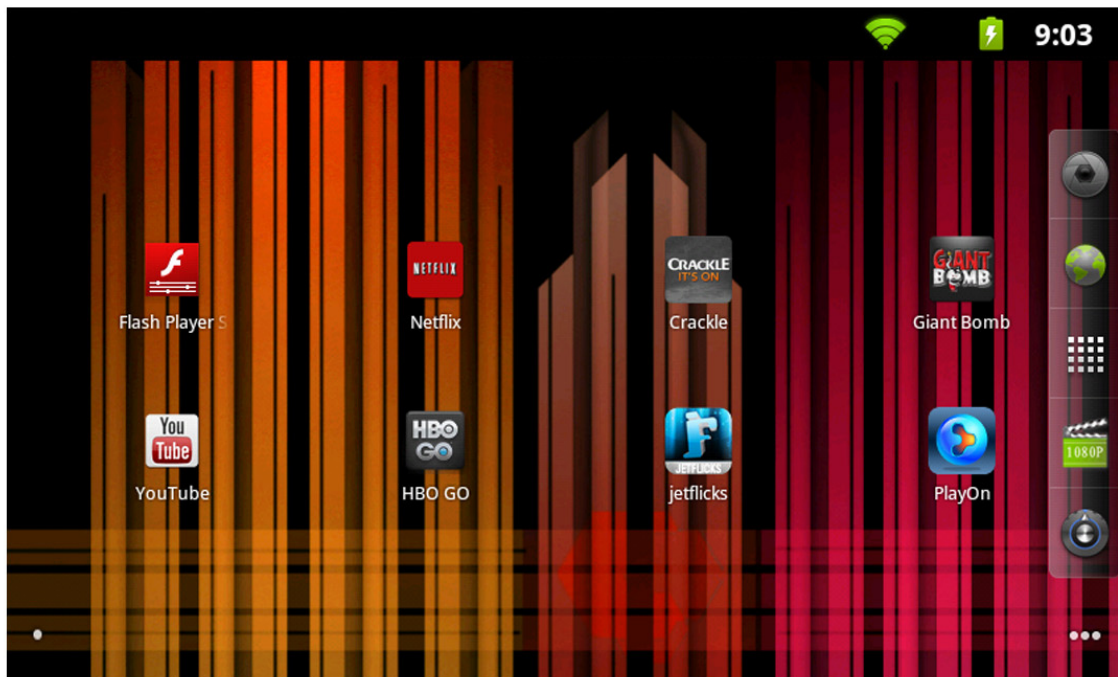

To view on your HDTV or monitor, connect using an optional HDMI cable (with a mini-HDMI plug).

13-Webcam and Video Chat



Camera Use

- Open the camera application by tapping on the webcam icon 
- Capture the images shown on the display by tapping the Aperture button 
- Tap the Menu key > Tap Gallery to view captured photos.

Note: You can also view your photos with the "Super-HD Player"  app

Camera functions

Tap 'delete' to erase the photo.


Tap 'share' to send the photo.

Tap 'more' to customize the photo.


Tap 'set as' to set the photo as the device's background.

Video Chat

Download and install your favorite video chat app on 1Mobile Market. The webcam will be set as the default camera for video chat.

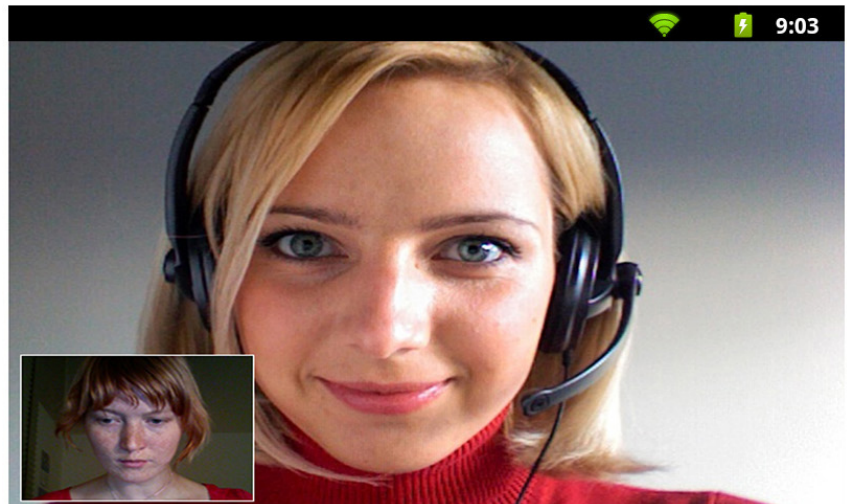


14-Setting Up Your Email

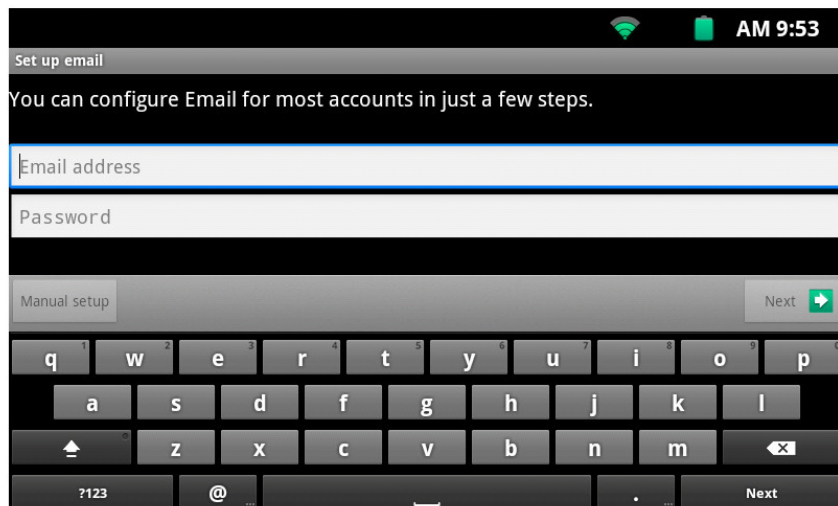

- From your App Tray  tap the 'Email' icon to enter the e-mail client.
- You will be prompted to enter an email address and a password.
- After you have entered your information press 'Next' to move to the next step.

Some email providers will require you to enter more details about the type of account you are using. You will have three choices: POP3, IMAP, Exchange. If you are unsure of your account type, please contact your email provider for more information.

- After hitting "Next" the email app will test the incoming and outgoing mail servers. Once that has completed, you will be prompted to enter an account name and your name.
- The account name is the name you can use to identify the name of the account on the tablet
- Your name is the name that will be displayed on all outgoing messages sent from the email app on your tablet.

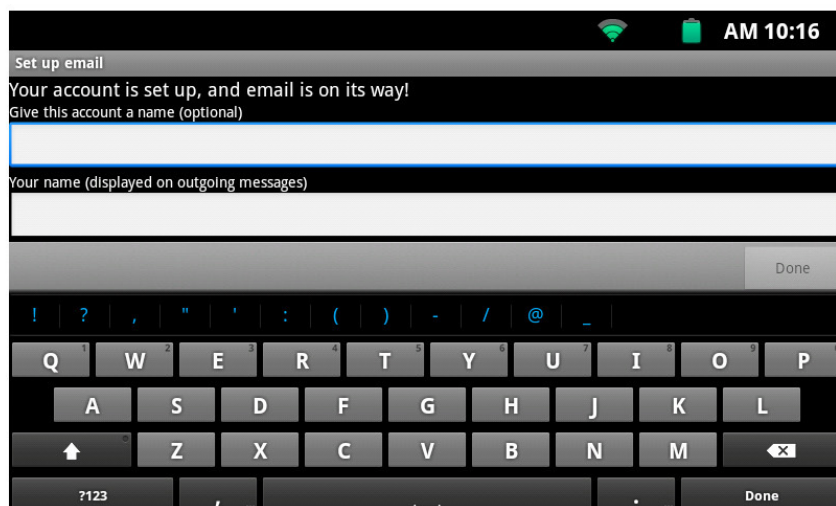

15-FAQ

How do I reset my Tablet to the factory default setting?

To erase all data on the Tablet go to Settings > Privacy > Tap “Factory data reset”.

Why can't I play flash games /videos or YouTube videos?

To properly run these games and videos, Adobe® Flash® Player may be required. Many popular streaming video applications are available through the 1Mobile market.

How do I customize my home screen with another picture?

From the App tray, select the “Super-HD Player” app. Tap a category then a picture to select it. Tap the Menu key > More > Set as > Wallpaper.

Where can I get Android Apps from?

We've pre-installed the 1Mobile Market, giving you immediate access to over 200,000 of the best Android apps available. All for free! Additionally, there are several 3rd party Android app stores that offer free and paid Android apps, such as Amazon AppStore, GetJar, and SlideMe. Google's Android Market is not official supported at this time.

If you are having problems operating this tablet, please call: **1-888-SKYTEX-9** or contact us at **support@skytex.com** for assistance.